


URC-1059

## OWNER'S MANUAL

# KAMELEON™-C6 TOUCHSCREEN REMOTE

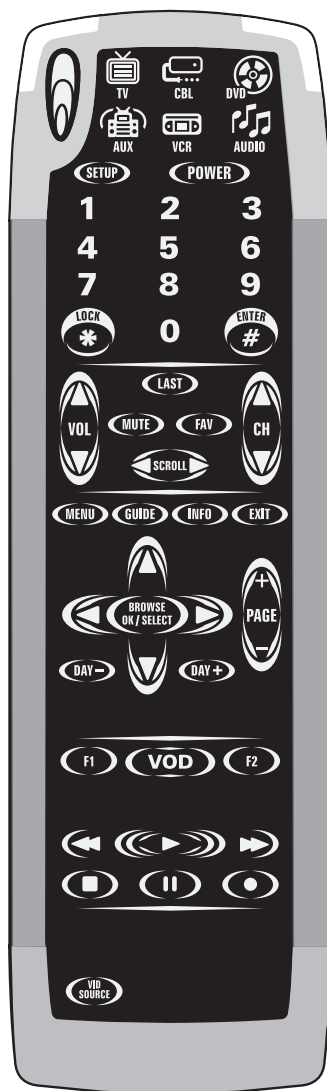

**UNIVERSAL**  
**ELECTRONICS**  
Putting You in Control of Technology

**KAMELEON-C6 REMOTE****TABLE OF CONTENTS****Introduction .....3****STEP 01****Installing Batteries .....4****STEP 02**

Kameleon-C6 Remote  
 Keypad Overview .....5-6  
 Keypad Functions .....7-10  
 Preprogrammed Devices .....10

**STEP 03**

Programming Your Kameleon-C6 Remote ....11  
 Searching for Your Device's Manufacturer Code 12  
 Manufacturer Codes .....28-41  
 Handling and Care .....13

**ADVANCED OPTIONS**


Device Code Verification .....14  
 Adjusting Keypad Brightness .....14  
 Volume Lock and Unlock .....15  
 Channel Control Lock .....16

**Creating Custom Keys .....17**  
 The Learning Feature .....17-19  
 Creating the Power Macro .....20  
 Creating Other Macros .....20-21  
 Reassigning Device Mode Keys .....22

**Trouble Shooting .....23****Glossary .....24-25****Additional Information .....26****FCC Statement .....27****Manufacturer Codes .....28-41**

## INTRODUCTION

Your Kameleon-C6 Remote is the next generation in remote control technology. Powered by Kameleon, a unique technology that combines the functionality of a traditional remote with the advantages of a touch-screen, your Kameleon-C6 Remote's innovative design operates up to six home entertainment devices including:

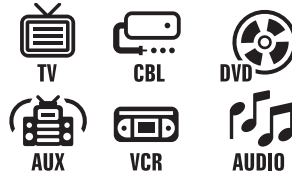

Unique screens identify the specific keys required to operate the digital cable set-top box provided by your cable system. The intuitive interface displays only the active keys for each selected device and the device icon key animates to indicate your selected device.

Let's get started programming your Kameleon-C6 Remote!

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### **Installing Batteries**

Your Kameleon-C6 Remote requires batteries. Four AAA alkaline batteries are included so you can immediately enjoy your Kameleon-C6 Remote.

#### **ABOUT REPLACING BATTERIES**

- Use only new batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (e.g. standard, alkaline or rechargeable), or rechargeable batteries of different capacities.
- If you do not plan to use the remote for an extended period of time, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.
- Dispose of old batteries promptly and properly.
- Do not burn or bury them.

#### **Replace your batteries when one of the following conditions occurs:**

- The bottom segment of the IR indicator blinks 5 times after each keypress.
- The remote no longer responds to movement.

#### **TO INSTALL BATTERIES**

1. Unscrew and remove the battery cover from the back of your Kameleon-C6 Remote.
2. Match the batteries to the “+” and “-” marks inside the battery case, then insert the batteries accordingly.
3. Reposition the battery cover and tighten the screw.

#### **REMEMBER**


- YOUR KAMELEON-C6 REMOTE HAS PERMANENT MEMORY RETENTION. REMOVING THE BATTERIES WILL NOT REQUIRE YOU TO REPROGRAM THE REMOTE.
- YOUR KAMELEON-C6 WILL “SLEEP” (TURN OFF) AFTER 7 SECONDS OF INACTIVITY TO CONSERVE THE BATTERIES. PICKING UP THE REMOTE OR PRESSING ANY KEY WILL TURN ON THE REMOTE AND THE KEYPAD BACKLIGHT.
- THE FIRST TIME YOU INSTALL BATTERIES, YOU WILL NEED TO PRESS THE TOUCH-PANEL TO ACTIVATE THE REMOTE CONTROL.

## **4 Installing Batteries**

## BATTERIES/KEYPAD OVERVIEW

### Kameleon-C6 Remote Keypad Overview


Familiarize yourself with the unique features of your Kameleon-C6 Remote. Up to six devices can be controlled by your Kameleon-C6 Remote, as indicated by the icons on the top of the keypad.

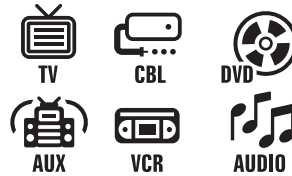

DEVICE MODE KEYS

You can program your Kameleon-C6 Remote to control your devices using these device mode keys.

Each device mode has a main and a menu screen— you can readily switch between these two screens for each device mode by hitting the scroll key. Your Kameleon-C6 intuitively displays only the active keys for each device mode.

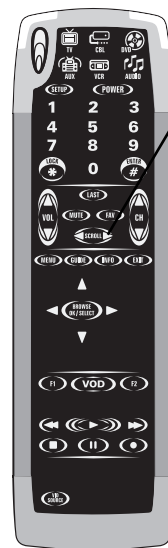

CABLE MAIN SCREEN



PRESS THE SCROLL KEY TO SWITCH TO THE MENU SCREEN FOR EACH DEVICE.




CABLE MENU SCREEN

## KAMELEON-C6 REMOTE

### Keypad Overview

Your Kameleon-C6 Remote is designed to control the following functions:

IR (infrared) Indicator

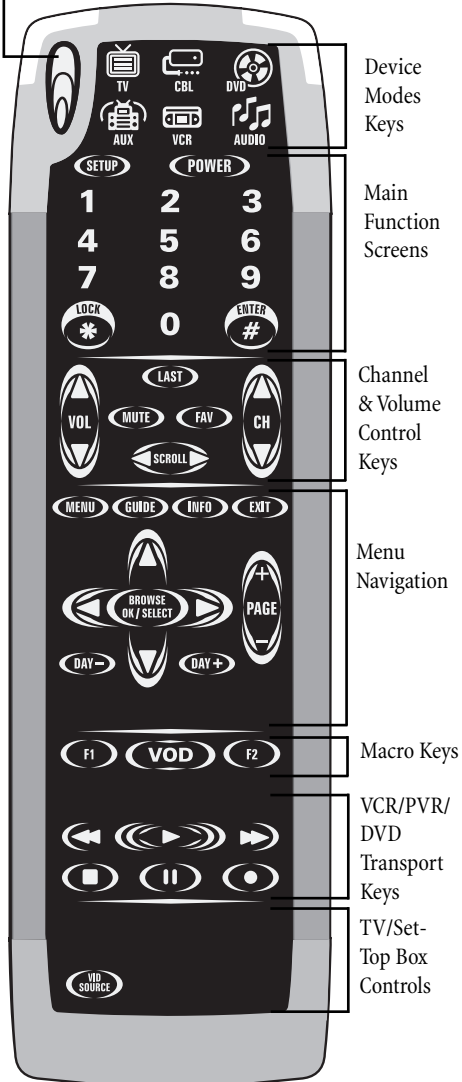

CABLE MENU SCREEN

## BATTERIES/KEYPAD OVERVIEW

### Keypad Functions

#### IR (INFRARED) INDICATOR

The IR Indicator animates when IR is being “sent” or “received”. The IR will show “outgoing IR” whenever a functional key is pressed.

#### DEVICE MODE KEYS



The TV, CBL, DVD, AUX, VCR, AUDIO are device mode keys that select the device that you want to control. For example, pressing the TV key allows the remote to control the functions of your Television. The selected device mode key animates to indicate the current device mode you are in.

#### MAIN FUNCTION SCREENS

##### Setup [ ]

Press Setup key for all programming sequences. When you press and hold the Setup key for at least 3 seconds, the bottom of the IR Indicator will blink twice to indicate a successful action.

##### Power [ ]

The Power key controls the same function as on your original remote.

##### Digit Keys [ | | | | |---|---|---| | 1 | 2 | 3 | | 4 | 5 | 6 | | 7 | 8 | 9 | | | 0 | | ]

The Digit (1-9, 0) keys control the same function as on your original remote.

##### Lock [ ]

Use Lock key to parentally lock out channels from viewing.

##### Enter [ ]

Use Enter key to control the same function as on your original remote.

#### CHANNEL & VOLUME CONTROL KEYS

##### Vol [ ]

Use Vol+ or (Vol-) key to raise (or lower) the audio's volume.

##### Last [ ]

Press Last key once to recall the last channel.

##### Mute [ ]

Press Mute key once to turn the sound off or on.

## KAMELEON-C6 REMOTE

### CHANNEL & VOLUME CONTROL KEYS continued

#### Fav [ ]

Use Fav key to cycle through your favorite channels stored in your cable converter.

#### Scroll [ ]

Use the Scroll key to cycle through the available device screens for the selected mode.



#### CH [ ]

Use CH+ (or CH-) key to select the next higher (or lower) channel.

*For amplifiers/receivers, use these keys to select the next higher (or lower) preset station.*

### MENU NAVIGATION

#### Menu [ ]

Press Menu key once to display the selected device's menu options.

#### Guide [ ]

Use Guide key to display the program Guide.

#### Info [ ]

Use Info key to display the current channel and program information.

#### Exit [ ]

Use Exit key to exit out of the selected device's menu or guide.

#### Settings [ ]

Press Settings key once to access additional cable features.

*For DVD, use Settings to access the DVD Players internal SETUP menu.*

#### Surround [ ]

In AUDIO or AUX mode, use Surround key to change the surround sound settings.



#### Cursor [ ]

Use the Cursor keys to move the cursor in the program guide and menu screens and to navigate within the interactive service. Use OK/SELECT key to choose options while using the Guide or Menu key of the selected device.



#### Page [ ]

Use Page + (or Page -) key to page up (or page down) through menu screens and the program guide.

## 8 Keypad Functions



## BATTERIES/KEYPAD OVERVIEW

### MENU NAVIGATION continued

**Day** [ ,  ]

Use DAY+ (or DAY-) key to move a day forward (or back) on your cable converter's program guide.

**A, B, C** [ , ,  ]

Use A, B, or C keys to access additional cable features (see your cable converter's manual).

### MACRO KEYS

**F1, VOD, F2** [ , ,  ]

Reserved for use as "Tune-In" keys (see "Creating Other Macros" on page 20).

### VCR/PVR/DVD TRANSPORT KEYS

**Replay** [  ]

Use Replay key to command your PVR to instantly replay the last 7 seconds of a program you are watching.

**List** [  ]

Press List key once to display a list of recorded shows on your PVR.

Press -->| to advance to the next Chapter while viewing a DVD

**Live** [  ]

Press Live key to return to watching live TV.

### Rewind Arrow

[ , , , ,  ]

In all modes except CBL, use REW, PLAY, FFWD, STOP, and PAUSE to control a VCR, DVD player, or a PVR (after selecting a desired device). To record in the VCR mode, press REC twice.

*In the CBL mode, use above keys to control DVR/PVR functions of the set-top box.*

### TV OR SET-TOP BOX CONTROLS

**Pip** [  ]

Use PIP ON-OFF key to switch the Picture-In-Picture feature on or off (if available on your TV or cable service).

**Vid Source** [  ]

The Vid Source key performs same functions as the TV/VCR or Input key on your original remote.

**Swap** [  ]

Use PIP SWAP key to switch images and sound between the main and window pictures.

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### TV OR SET-TOP BOX CONTROLS continued

#### Move [ ]

Use PIP MOVE key to move the window picture to different positions in the main picture.

#### Sur Snd [ ]

Use the Sur Snd + (or Sur Snd -) keys to adjust the surround sound speaker levels.

#### PIP Ch [ ]

Use PIP CH + (or PIP Ch -) keys to select the next higher (or lower) PIP channel.

### PREPROGRAMMED DEVICES







If you have any of the following preprogrammed devices, you may start using your Kameleon-C6 Remote immediately. Your Kameleon-C6 Remote is preprogrammed to operate the following brands:

Brand	Device	Code
RCA	TV	0047
RCA	VCR	0060
RCA	DVD	0522
Scientific Atlanta	Cable	1877
Pioneer	AUX	0032
Pioneer	Audio	0123

## PROGRAMMING REMOTE

### Programming Your Kameleon-C6 Remote

The device mode keys located at the top of your Kameleon-C6 Remote are designed to control:

		
<b>TV</b>	<b>CBL</b>	<b>DVD</b>
TV	•Cable Box •Video Accessory	•DVD •VCR •PVR
		
<b>AUX</b>	<b>VCR</b>	<b>AUDIO</b>
•Amp/Tuner •Amplifier •CD •Home Theater in Box	•VCR •DVD •PVR	•Amp/Tuner •Amplifier •CD •Home Theater in Box

### TO PROGRAM YOUR KAMELEON-C6 REMOTE

To set up other devices, perform the following steps to program your Kameleon-C6 Remote. Repeat the steps for each desired device one at a time.

1. Turn your **device on**.
2. **Find your device code** in the Manufacturer Code section (see page 28-41). The most common code for each brand is listed first.
3. Press the **desired device mode key** on your Kameleon-C6.
4. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
5. Enter the **first four-digit Manufacturer Code**. The bottom of the IR indicator will blink twice.
6. Lastly, aim the Kameleon-C6 at your device and press **Power**. If the device does not respond, repeat steps 3-5 using the next Manufacturer Code listed under your brand.
7. Repeat the process for each additional device you would like to program into the remote.

## KAMELEON-C6 REMOTE

### REMEMBER

- IF THE LISTED DEVICE'S MANUFACTURER CODES DO NOT WORK, TRY "SEARCHING FOR YOUR DEVICE'S MANUFACTURER CODE." SEE BELOW.
- IF THE ORIGINAL REMOTE CONTROL FROM YOUR VCR DOES NOT HAVE A POWER KEY, PRESS PLAY INSTEAD OF POWER ON STEP 6.
- YOU CAN ALSO SET UP A SECOND TV, CBL, DVD, AUX, VCR, OR AUD. SEE "REASSIGNING DEVICE MODE KEYS" ON PAGE 21.

### Searching for Your Device's Manufacturer Code

If you have tried all of your Device's Manufacturer Codes and your device still does not respond to the Kameleon-C6 Remote, "Searching for Your Device's Manufacturer Codes" allow you to manually find the Manufacturer Code for your device. Kameleon-C6 Remote can cycle through all the codes in its code library memory until it finds a code that properly operates the device you wish to program.

#### TO SEARCH FOR YOUR DEVICE'S MANUFACTURER CODE

1. Turn your **device on**.
2. Press the **desired device mode key** on your Kameleon-C6.
3. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
4. Press **9 9 1** on the keypad. The bottom of the IR indicator will blink twice.
5. Aim your remote at your device and **press the device mode key followed by Power**.
  - 5a. If your device turns off, press and release the **Setup** key to store the code.
  - 5b. If your device does not turn off, press the device mode key to cycle through the next set of codes and press Power again. Repeat step 5b until you find the code that turns off your device.

### REMEMBER

- KEEP THE REMOTE POINTED AT YOUR DEVICE WHILE REPEATING THE STEPS. PLEASE BE PATIENT.
- IF A KEY IS NOT PRESSED WITHIN 30 SECONDS DURING STEP 5, YOUR KAMELEON-C6 REMOTE WILL EXIT THE SETUP MODE AND RETURN TO THE PREVIOUSLY SELECTED CODE.
- IF THE ORIGINAL REMOTE CONTROL FROM YOUR VCR DOES NOT HAVE A POWER KEY, PRESS PLAY INSTEAD OF POWER IN STEP 5.

## 12 Searching for Your Device's Manufacturer's Code

## PROGRAMMING REMOTE

### **Handling and Care**

The following are some tips for caring for your Kameleon-C6 Remote:

- Keep the remote dry. If it accidentally gets wet, wipe it dry immediately.
- Handle the remote gently and carefully. Don't drop or throw the remote.
- Use and store the remote only in normal temperature environments.
- Keep the remote away from dust and dirt.
- When necessary, wipe the remote with a damp cloth to keep it looking new.
- Modifying or tampering with internal parts can cause damage.

---

**Congratulations!** Your Kameleon-C6 is ready to operate your home entertainment components. You can maximize all of Kameleon-C6 features by setting up the remote with advanced options like Adjusting Keypad Brightness, Volume Lock and Unlock, Channel Control Lock, and Creating Custom Keys.

Introduction

Batteries\Keypad Overview

**Programming Remote**

Advanced Options

Glossary\Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### Device Code Verification

You can verify any device code that you have programmed. This will be helpful in retrieving an existing device's Manufacturer Code programmed into your Kameleon-C6 Remote for future reference.

#### TO VERIFY A DEVICE CODE

1. Press the **desired device mode key** on your Kameleon-C6 Remote.
2. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
3. Press **9 9 0** on the keypad. The bottom of the IR indicator will blink twice.
4. **To determine the first digit of your 4-digit code, press 1 and count the number of blinks on the bottom part of the IR indicator.** For example, if there is one blink, then the digit is "1" -- if there is two blinks, the digit is "2" -- and so on. If there are no blinks, the digit is "0."
5. For the second digit, **press 2** and count the number of blinks .
6. For the third digit, **press 3** and count the number of blinks .
7. Lastly, for the fourth digit, **press 4** and count the number of blinks .

#### REMEMBER

- YOU ARE VERIFYING THE CODE FOR THE SELECTED DEVICE.
- IF AFTER PRESSING 9 9 0, ANY DIGIT OTHER THAN 1 IS PRESSED, YOUR KAMELEON-C6 WILL EXIT THE SETUP MODE.
- IF A KEY IS NOT PRESSED WITHIN 30 SECONDS, YOUR KAMELEON-C6 REMOTE WILL EXIT THE DEVICE CODE VERIFICATION.

### Adjusting Keypad Brightness

You can customize the backlight setting on your Kameleon-C6 keypad.

#### TO ADJUST BRIGHTNESS

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 7 4** on the keypad. The bottom of the IR indicator will blink twice.
3. **To increase the brightness press CH+. To decrease the brightness press CH-.**
4. Lastly, press **Setup** again to save the new brightness setting.

## ADVANCED OPTIONS

### **Volume Lock and Unlock**

You can customize the volume control in your Kameleon-C6 Remote by “locking” or “unlocking” the volume control for a device (e.g. TV) while in a different device mode (e.g. VCR). For example, if you are watching a movie on your VCR, you can adjust the volume on your TV without first pressing the TV device mode key.

The volume default setting for each device mode is locked to the TV device mode. With the Volume Unlock feature, you can customize the volume setting for any device.

#### **TO UNLOCK THE VOLUME CONTROL FOR A DEVICE**

1. Press the **desired device mode key**.
2. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
3. Press **9 9 3** on the keypad. The bottom of the IR indicator will blink twice.
4. Lastly, press the **VOL (-) key once**. The bottom of the IR indicator will blink four times.

Now, when you are in that selected device mode, you will be able to adjust the volume using the VOL +/- keys on your Kameleon-C6 Remote.

#### **TO LOCK THE VOLUME CONTROL FOR ONE DEVICE WHILE IN A DIFFERENT DEVICE MODE**

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 9 3** on the keypad. The bottom of the IR indicator will blink twice.
3. Lastly, press the **device mode key** for the device you want to Lock. The bottom of the IR indicator will blink twice.

Introduction

Batteries\Keypad Overview

Programming Remote

Advanced Options

Glossary\Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### **Channel Control Lock**

The Kameleon-C6 Remote includes a programming feature that allows you to program the remote's channel control capabilities to be locked to the cable converter using the following keys: 0~9, CH+, CH-, ENTER, and LAST\*. This will guarantee that you do not inadvertently change a channel on your TV or VCR.

This feature is de-activated by default and can be activated or de-activated by following the steps below.

\*NOTE: THIS FEATURE DOES NOT AFFECT THE AUD OR AUX MODES.

### **TO ACTIVATE CHANNEL CONTROL LOCK**

1. Press **CBL device mode** key once. It will blink once.
2. Press **Setup** until the CBL key blinks twice, then release Setup.
3. Enter **9 7 3**. The CBL key will blink twice.
4. Press **CH + once**. The CBL key will blink two times.
5. Now, regardless of what mode you select (except AUD or AUX), only the channel control capability of your cable converter will be accessible.

### **TO DE-ACTIVATE CHANNEL CONTROL LOCK**

1. Press **CBL device mode key** once. It will blink once.
2. Press **Setup** until the CBL key blinks twice, then release Setup.
3. Enter **9 7 3**. The CBL key will blink twice.
4. Press **CH- once**. The CBL key will blink four times.
5. Now, the remote control will provide TV and VCR channel-control capabilities while in the TV or VCR mode.



## ADVANCED OPTIONS

### Creating Custom Keys

You can easily create custom keys on your Kameleon-C6 keypad by two ways:

- The Learning Feature allows you to transfer functions from your original remote to your Kameleon-C6 Remote. See below.
- Macros allow you to program a sequence of events into one convenient press button. See “Creating the Power Macro” on page 20.

You can combine a Learned key in a Macro sequence, creating an even more personalized Kameleon-C6 remote. Furthermore, even if a Learned function used in a Macro is subsequently deleted, the Macro will revert to the keys original function.

### The Learning Feature

Your Kameleon-C6 Remote comes with a complete library of pre-programmed codes. After you have set up your Kameleon-C6 –for your device, you may find that there are one or more keys on the device’s original remote control that you would like to have on the Kameleon-C6 keypad.

Your Kameleon-C6 Remote includes a Learning Feature so you can add functions that are unique to your home entertainment devices (e.g. VCR Tracking Up or Down). You may assign the Learned Function to any key, except for the Setup, Scroll and device mode keys (TV, CBL, DVD, AUX, VCR and Audio).

#### REMEMBER

- YOUR ORIGINAL REMOTE CONTROL MUST BE IN WORKING ORDER FOR THE LEARNING FEATURE TO WORK PROPERLY.
- LEARNED FUNCTIONS ARE DEVICE MODE SPECIFIC, SO EACH KEY CAN STORE A UNIQUE FUNCTION FOR EACH DEVICE MODE.
- LEARNED KEYS CAN BE USED IN MACROS (SEE “CREATING OTHER MACROS” ON PAGE 20.)
- ASSIGNING LEARNED FUNCTIONS TO THE SETUP, SCROLL OR DEVICE MODE KEYS WILL OVERWRITE THE KEYS’ ORIGINAL FUNCTIONS.
- WHEN PROGRAMMING LEARNED KEYS, AVOID HIGH LEVELS OF AMBIENT LIGHT SUCH AS NATURAL SUNLIGHT OR ENERGY-EFFICIENT FLUORESCENT LIGHTS.
- HAVE YOUR ORIGINAL REMOTE CONTROLS HANDY WHEN PROGRAMMING THE LEARNING FEATURE.
- BE SURE TO PRESS EACH KEY WITHIN 30 SECONDS OF THE PREVIOUS ENTRY. IF NOT, THE KAMELEON-C6 REMOTE WILL TIME OUT AND THE CUSTOM KEY YOU WISH TO LEARN WILL NEED TO BE PRESSED AGAIN.

Introduction

Batteries\Keypad Overview

Programming Remote

Advanced Options


Glossary\Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### TO PROGRAM A LEARNED FUNCTION

1. Place your Kameleon-C6 Remote and your original remote control on a flat surface. Position the remotes no more than 1 to 2 inches apart. Make sure the ends that you normally point at your device are facing each other. See image below.

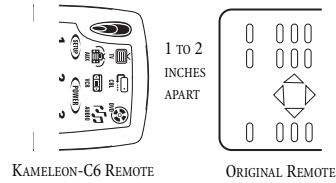

2. On your Kameleon-C6 Remote, press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.

3. Press **9 7 5** on the Kameleon-C6 keypad. The bottom of the IR indicator will blink twice.

4. **On your Kameleon-C6 Remote, press the device mode key** for which you want to copy the learned function from your original remote.

5. **On your Kameleon-C6 Remote, press the key (e.g., F1 key) you want to save the Learned function.** The bottom of the IR indicator will blink an “incoming IR” three times and your Kameleon-C6 Remote will switch off.

6. **Press and hold the original remote control’s key** (e.g., mono/stereo key on your original remote control) until Kameleon-C6 keypad switches back on. The bottom of the Kameleon-C6’s IR indicator will blink twice to indicate a successful transfer. A long blink indicates failure.

7. If you want to copy other functions from the same original remote, **simply repeat steps 5 and 6, pressing the next key you want to copy.**

8. Lastly, to exit the Learning Feature, press **Setup** on your Kameleon-C6 for at least 3 seconds. The bottom of the IR indicator will blink twice.

#### REMEMBER

- AFTER THE KAMELEON-C6 KEYPAD SWITCHES OFF IN STEP 5, YOU NEED TO PRESS THE KEY ON YOUR ORIGINAL REMOTE WITH IN 5 SECONDS. OTHERWISE, YOUR KAMELEON-C6 REMOTE WILL EXIT THE LEARNING MODE.
- AFTER 30 SECONDS OF INACTIVITY WHILE IN LEARNING FEATURE, THE REMOTE WILL EXIT THE LEARNING MODE.
- IN THE LEARNING MODE, KEYS SUCH AS “TV MENU” WILL NOT CHANGE THE SCREEN WHEN PRESSED.
- IF YOU WANT A KEY THAT IS NOT IN THE MAIN SCREEN TO LEARN A FUNCTION, USE THE SCROLL KEY TO CHANGE THE SCREEN.

## ADVANCED OPTIONS

- THE LEARNING FEATURE IS DEVICE MODE SPECIFIC— THEREFORE, YOU CAN PLACE ONE LEARNED FUNCTION PER DEVICE MODE ON THE SAME KEY.
- THE KAMELEON-C6 CAN LEARN UP TO 25 FUNCTIONS.
- YOU CAN OVERRIDE A LEARNED FUNCTION BY PROGRAMMING A NEW LEARNED FUNCTION ON THE SAME KEY.
- LEARNING SHOULD NOT BE DONE IN DIRECT SUNLIGHT OR UNDER INCANDESCENT LIGHTS.
- MAKE SURE YOU ARE USING FRESH BATTERIES WHEN USING THE LEARNING FEATURE.
- WHEN CHANGING BATTERIES, YOUR LEARNED FUNCTIONS WILL BE RETAINED.

### ABOUT THE LEARNING FEATURE

- Some device functions are not learnable, including those with multi-frequency codes, some high-frequency codes, and other unusual formats.
- You will be able to transfer only one function at a time from your original remote to your Kameleon-C6 Remote.
- To perform a sequence of Learned Functions, you can program Macros. See “Creating Other Macros” on page 20.

### Deleting a Learned Function

You can delete a single learned function or all learned functions for a certain device mode.

#### TO DELETE A SINGLE LEARNED FUNCTION

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 7 6** on the keypad. The bottom of the IR indicator will blink twice.
3. Press the **Custom Key** that holds the function you wish to delete.
4. Lastly, press the **Custom Key** again to confirm deletion.

#### TO DELETE ALL LEARNED FUNCTIONS WITHIN A CERTAIN DEVICE MODE

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 7 6** on the keypad. The bottom of the IR indicator will blink twice.
3. Press the **device mode key** in which you want to delete all functions.
4. Lastly, press the **device mode key again** to confirm.

Introduction

Batteries\Keypad Overview

Programming Remote

Advanced Options

Glossary\Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### **Creating the Power Macro**

You can program the Power key on your Kameleon-C6 Remote to turn on and off multiple devices at the same time. You can command up to six devices with one press of your Power key!

#### **TO PROGRAM THE MACRO FOR THE POWER KEY**

1. Press the **Cable device mode key**.
2. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
3. Press **9 9 5** on the keypad. The bottom of the IR indicator will blink twice.
4. Press the **Power key**.
5. **Press the mode key for the first device that you want to program, followed by the mode keys for each device you want to command** (up to six devices).
6. Lastly, press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.

### **Creating Other Macros**

In addition to programming the Power key as a Macro, you can program other custom keys on your Kameleon-C6 Remote to conveniently perform a sequence of commands at the press of one button. For example, if your cable system has a VOD service that has information available on channel 0-0-1, you can program the VOD key to tune to this channel with one key press.

You can install a Macro on any key, except for the Setup key and the devices mode keys (TV, CBL, DVD, AUX, VCR, and Audio).

## ADVANCED OPTIONS

### TO PROGRAM A MACRO

1. Press **Cable device mode** key.
2. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
3. Press **9 9 5** on the keypad. The bottom of the IR indicator will blink twice.
4. Press **VOD** key.
5. Press **Cable Device mode** key followed by **0-0-1**.
6. Lastly, to save the Macro, press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.

Now, whenever you press the programmed custom VOD key, the Kameleon-C6 Remote will tune the cable converter to channel 001.

#### REMEMBER

- EACH MACRO CAN CONSIST OF A MAXIMUM OF 15 KEYSTROKES.
- YOU CAN COMBINE A LEARNED KEY IN A MACRO SEQUENCE, CREATING AN EVEN MORE PERSONALIZED KAMELEON-C6 REMOTE. (IF A LEARNED FUNCTION USED IN A MACRO IS SUBSEQUENTLY DELETED, THE MACRO WILL REVERT TO THE KEY'S ORIGINAL FUNCTION.)
- TO INCLUDE A FUNCTION FROM A PARTICULAR SCREEN IN A DEVICE MODE, USE THE SCROLL KEY.
- MAKE SURE THAT YOU PROGRAM A MACRO ON A SPARE KEY THAT YOU DON'T USE IN ANY DEVICE MODE.
- ONCE YOU PROGRAM A MACRO ON A SPECIFIC KEY, THE SEQUENCE WILL WORK REGARDLESS OF THE DEVICE MODE YOU ARE IN. THIS MEANS THAT THE FUNCTION ORIGINALLY PROGRAMMED ON THAT SPECIFIC KEY WILL BE OVERWRITTEN.
- TO AVOID ACCIDENTAL RECORDINGS, YOU MUST PRESS THE RECORD KEY ON YOUR KAMELEON-C6 REMOTE TWICE TO RECORD. PLEASE NOTE THAT IF YOU ASSIGN A MACRO TO THE RECORD KEY, YOU WILL DE-ACTIVATE THE DOUBLE KEY PRESS— THEREFORE WE DO NOT RECOMMEND ASSIGNING A MACRO TO THIS KEY.
- IF YOU HAD TO HOLD DOWN A KEY FOR A FEW SECONDS ON THE ORIGINAL REMOTE CONTROL TO GET A FUNCTION, THIS FUNCTION MAY NOT WORK IN A MACRO ON YOUR KAMELEON-C6 REMOTE.
- A KEY THAT IS PROGRAMMED WITH A MACRO WORKS IN ANY DEVICE MODE INCLUDED ON THAT MACRO.

You can delete a Macro for any of the keys that were assigned a macro.

### TO DELETE A MACRO

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 9 5** on the keypad. The bottom of the IR indicator will blink twice.
3. Press the **desired custom Macro** key.
4. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.

Introduction

Batteries\Keypad Overview

Programming Remote

Advanced Options

Glossary\Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### Reassigning Device Mode Keys

#### Setting up an Additional Device

The six device mode key icons are designed to easily identify the most common combination of home entertainment devices.

However, any device mode key can be programmed to control any home entertainment device, even though the icon may not match that particular device. For instance, if you want to control two televisions, one cable, and a DVD player, you can assign one television, one cable, and one DVD player to the mode keys with the appropriate icons. Then assign the second television to any one of the remaining keys (AUX, VCR, or Audio). Simply follow the steps in “Programming Your Kameleon-C6 Remote on page 11.”

#### TO CREATE SECOND DEVICE MODE KEY

**Example 1:** If you wish to program a second TV on the DVD key. Follow the steps to change the DVD key into a TV key:

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 9 2** on the keypad. The bottom of the IR indicator will blink twice.
3. Press the **TV device mode key**.
4. Lastly, press the **DVD device mode key**. The bottom of the IR indicator will blink twice.
5. Repeat steps 1-4, pressing a different device mode key to create the additional device.
6. Refer to “Programming Your Kameleon-C6 Remote” on page 11 to program in the Manufacturer Code for your device.

#### TO RESET A DEVICE KEY

**Example 1** (continued): If you wish to reset the DVD key to its original mode, follow the steps:

1. Press **Setup** for at least 3 seconds. The bottom of the IR indicator will blink twice.
2. Press **9 9 2** on the keypad. The bottom of the IR indicator will blink twice.
3. Press the **DVD device mode key**.
4. Lastly, press the **DVD device mode key** again. The bottom of the IR indicator will blink twice.

## TROUBLE SHOOTING

**Trouble Shooting**

**Problem:** No icons or keys light up when you press a key.

**Solution:** Replace the batteries with new 4 AAA Alkaline Batteries. See “Installing Batteries” on page 4.

**Problem:** Device mode key blinks when you press a key, but home entertainment device does not respond.

**Solution:** Make sure you are aiming your Kameleon-C6 Remote directly at your home entertainment device and that you are within 15 feet of the device you are trying to control.

**Problem:** My Kameleon-C6 Remote does not control home entertainment devices or commands are not performing properly.

**Solution:** Try all listed device manufacturer codes. Make sure all devices can be operated with an infrared remote control.

**Problem:** TV/VCR Combo does not respond properly.

**Solution:** Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation.

**Problem:** There is no volume on the second TV.

**Solution:** Follow the instructions in “Volume Lock and Unlock” on page 15.

**Problem:** CH+, CH- and LAST do not work on my RCA TV.

**Solution:** Due to RCA design (1983 -1987), only the original remote control will operate these functions.

**Problem:** Tried “Searching for Your Device’s Manufacturer Code” and still could not find a working device code.

**Solution:** Clear out the device mode key and then try “Searching for Your Device’s Manufacturer Code” on page 12 again.

**TO CLEAR THE DEVICE MODE KEY**

1. Press **Setup** for at least 3 seconds. The IR indicator will blink twice.
2. Press **9 9 2** on the keypad. The bottom of the IR indicator will blink twice.
3. Lastly, press the **desired device mode key**.
4. Lastly, press the **same device mode key**.

**Problem:** Kameleon-C6 Remote control does not turn on Sony or Sharp TV/VCR Combo.

**Solution:** To turn on Sony or Sharp TV/VCR Combo, program the following Manufacturer Codes on the appropriate device mode keys:  
 Sony – TV: 0000, VCR: 0032  
 Sharp-V: 0093, VCR: 0048  
 See “Programming Your Kameleon-C6 Remote” on page 11.

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### **Glossary**

**Amp/Tuner-** n. short for Amplifier and Tuner. It is one of the devices that can be programmed under the AUX and AUDIO device mode keys on your Kameleon-C6. See “Your Kameleon-C6 Keypad Overview” on page 11.

**AUD-** n. short for Audio. .

**AUX-** n. short for Auxiliary. It is one of the device modes on your Kameleon-C6 Remote. See “Your Kameleon-C6 Keypad Overview” on page 6.

**Blink-** v. It describes an action or animation. Mainly used to describe how the IR indicator displays when a step is followed correctly.

**CD-** n. short for Compact Disk. It is one of the devices that can be programmed under the AUX device mode key on your Kameleon-C6 Remote. See “Your Kameleon-C6 Keypad Overview” on page 11.

**Code-** n. see Device’s Manufacturer Codes.

**Combo-** n. See TV/VCR Combos.

**Device-** n. A device is a home entertainment component or system.

**Device Modes, Device Keys-** n. These are the keys with icons located at the top of your Kameleon-C6 Remote. See Your “Kameleon-C6 Keypad Overview” on page 6.

**Device Codes-** n. see Device Manufacturer’s Codes.

**Device’s Manufacturer Code-** n. The Device’s Manufacturer Code section of the manual lists codes for each device with the most common code listed first. See page 28.

**DVD-** n. short for Digital Video Disk. It is one of the device modes on your Kameleon-C6 Remote. See “Your Kameleon-C6 Keypad Overview” on page 11.

**Home Theater in Box-** n. It is an audio device that can be programmed under the Audio device mode key. See “Your Kameleon-C6 Keypad Overview” on page 11.

**IR-** n. short for Infrared. It is located in the upper left corner of your Kameleon-C6 Remote. See “Your Kameleon-C6 Keypad Overview” on page 6.



## GLOSSARY

**Learn-** v. It is the ability to transfer functions from your original remote to your Kameleon-C6 Remote. See “The Learning Feature” on page 17.

**Learning Feature-** n. The Learning Feature is a feature of your Kameleon-C6 Remote that allows it to “learn” functions from your original remote. See page 17.

**Macro-** v. To program a sequence of actions into one key press. See “Creating Other Macros” on page 20.

**Original Remote-** n. Refers to the original remote control that your Kameleon-C6 Remote is replacing.

**PIP-** n. short for Picture in Picture. It is one of the TV/Set-top box controls on your Kameleon-C6 Remote.

**Power-** n. Power is a key on the top middle of your Kameleon-C6 remote. See your “Kameleon-C6 Keypad Overview” on page 6.

**PVR-** n. short for Personal Video Recorder. It is one of the devices that can be programmed under the DVD and VCR device mode key on your Kameleon-C6 Remote.

**Setup, Setup Key-** n. It is a key on the top middle of your Kameleon-C6 Remote. It is mainly used in all of the programming steps. See “Kameleon-C6 Keypad Overview” on page 6.

**TV-** n. short for Television. It is one of the device modes on your Kameleon-C6 Remote. See “Kameleon-C6 Keypad Overview” on page 6.

**TV/VCR Combo-** n. It is a device that includes both a TV and a VCR in one unit. See “Trouble Shooting” on page 23.

**VCR-** n. short for Video Cassette Recorder. It is one of the device modes on your Kameleon-C6 Remote. See “Kameleon-C6 Keypad Overview” on page 6.

**VOD-** n. short for Video on Demand. It is one of the Macro keys on your Kameleon-C6 Remote. See “Kameleon-C6 Keypad Overview” on page 6.

Introduction

Batteries\Keypad Overview

Programming Remote

Advanced Options

Glossary\Trouble Shooting

Manufacturer Codes

---

## KAMELEON-C6 REMOTE

 
 
---

### **Additional Information**

This product does not have any user-serviceable parts. Opening the case, except for the battery cover, may cause permanent damage to your Kameleon-C6 remote.

Copyright 2003 by Universal Electronics Inc. No part of this publication may be reproduced, transmitted, transcribed, stored in any retrieval system, or translated to any language, in any form or by any means, electronic, mechanical, magnetic, optical, manual, or otherwise, without prior written permission of Universal Electronics Inc.

Manual #M1059 .....5/03



## ADDITIONAL INFORMATION/FCC STATEMENT

### **FCC Statement**

This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference with one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment has been verified to comply with the limits for a class B computing device, pursuant to FCC Rules. In order to maintain compliance with FCC regulations, shielded cables must be used with this equipment. Operation with non-approved equipment or unshielded cables is likely to result in interference to radio and TV reception. The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Trouble Shooting

Manufacturer Codes

## KAMELEON-C6 REMOTE

### SETUP CODES FOR AMPLIFIERS

GE  
0078  
Harman/Kardon  
0892  
JVC  
0331  
Left Coast  
0892  
Marantz  
0892  
Optimus  
0395  
Philips  
0892  
Polk Audio  
0892  
Realistic  
0395  
Soundesign  
0078  
Victor  
0331  
Wards  
0078  
Yamaha  
0354

Paragon  
0000  
Philips  
0305  
Pioneer  
0877  
0144  
0533  
1877  
Pulsar  
0000  
Quasar  
0000  
Runco  
0000  
Samsung  
0144  
Scientific Atlanta  
0877  
0008  
0477  
1877  
Sony  
1006  
Starcom  
0003  
Supercable  
0276  
Torx  
0003  
Toshiba  
0000  
Zenith  
0000  
0525  
0899

### SETUP CODES FOR CABLE

ABC  
0003  
0008  
Americast  
0899  
Bell South  
0899  
Director  
0476  
General Instrument  
0476  
0003  
0276  
GoldStar  
0144  
Jerrold  
0476  
0003  
0276  
Memorex  
0000  
Motorola  
0476  
0276  
Pace  
0237  
Panasonic  
0000

### SETUP CODES FOR CD PLAYERS

Aiwa  
0157  
Burmester  
0420  
California Audio Labs  
0029  
Carver  
0157  
Classic  
1297  
DKK  
0000  
DMX Electronics  
0157  
Denon  
0873  
0003  
GPX  
1296  
Garrard  
0393  
0420

## MANUFACTURER CODES

Genexxa	Polk Audio	Introduction
0032	0157	
Harman/Kardon	Proton	
0157	0157	
Hitachi	QED	
0032	0157	Batteries/Keypad Overview
Integra	Quasar	
0101	0029	
JVC	RCA	
0072	1062	
1294	0032	Programming Remote
KLH	0053	
1318	0468	
Kenwood	Realistic	
0681	0420	
0626	Rotel	Advanced Options
0028	0157	
0037	0420	
0190	SAE	
Krell	0157	
0157	Sansui	Glossary/Troubleshooting
Linn	0157	
0157	Sharp	
MCS	0861	
0029	0037	
MTC	Sonic Frontiers	Manufacturer Codes
0420	0157	
Magnavox	Sony	
0157	0490	
Marantz	0000	
0626	0100	Introduction
0029	0185	
0157	Soundesign	
Miro	0145	
0000	TAG McLaren	
Mission	0157	Batteries/Keypad Overview
0157	TDK	
NSM	1208	
0157	Tascam	
Onkyo	0420	
0868	Teac	Programming Remote
0101	0393	
Optimus	0420	
1063	Technics	
0000	0029	
0032	Victor	Advanced Options
0037	0072	
0145	Wards	
0420	0157	
0468	0053	
Panasonic	Yamaha	Glossary/Troubleshooting
0029	0888	
Parasound	0036	
0420	1292	
Philips	Yorx	
0626	0461	Manufacturer Codes
0157		
Pioneer		
1063		
1062		
0032		
0468		

## KAMELEON-C6 REMOTE

### SETUP CODES FOR VIDEO

Hewlett Packard  
1272  
Microsoft  
1272  
Panasonic  
1120  
Pioneer  
1010  
Princeton  
0113  
0295  
Samsung  
1190  
Sensory Science  
1126  
Sharp  
1010

### SETUP CODES FOR RECEIVERS

ADC  
0531  
Aiwa  
1089  
1405  
0158  
0189  
1388  
Alco  
1390  
Anam  
1609  
Apex Digital  
1257  
Audiotronic  
1189  
Audiovox  
1390  
Bose  
1229  
1253  
Capetronic  
0531  
Carver  
1089  
1189  
0189  
Denon  
1360  
Harman/Kardon  
0110  
0189  
Integra  
0135  
JBL  
0110  
JVC  
0074  
1374

KLH  
1390  
Kenwood  
1313  
1027  
1570  
1569  
0027  
Lasonic  
1798  
Linn  
0189  
MCS  
0039  
Magnavox  
1089  
1189  
1269  
0189  
0531  
Marantz  
1089  
1189  
0039  
0189  
Musicmagic  
1089  
Norcent  
1389  
Onkyo  
0135  
0842  
Optimus  
1023  
0531  
Panasonic  
1518  
0039  
Philips  
1089  
1189  
1269  
0189  
Pioneer  
1023  
0014  
0531  
1384  
Polk Audio  
0189  
Proscan  
1254  
Quasar  
0039  
RCA  
1023  
1254  
0531  
1390  
1609  
Samsung  
1295

### 30 Manufacturer Codes

## Manufacturer Codes

## SETUP CODES FOR TELEVISION

**KAMELEON-C6 REMOTE****SETUP CODES FOR  
TELEVISION** continued

	Electroband
	0000
Citizen	0185
0060	Electrohome
0030	0381
0056	Emerson
0039	0154
0046	0236
0092	0463
0186	0180
0280	0282
Clairtone	0178
0185	0179
Clarion	0039
0180	0038
Concerto	0177
0056	0185
Contec	0280
0180	0623
0157	Envision
0185	0030
Craig	Fisher
0180	0154
Crosley	0159
0054	Fujitsu
Crown	0179
0180	0683
0039	Funai
Curtis Mathes	0180
0047	0179
0054	0171
0154	Futuretech
0451	0180
0093	GE
0060	0047
0030	0051
0145	0451
0056	0282
0016	0178
0039	0021
0166	0055
0466	0027
0702	0135
0747	0747
1147	1147
1347	1347
Daewoo	Gibralter
0451	0017
0039	0030
0092	GoldStar
0623	0030
Denon	0178
0145	0001
Dumont	0032
0017	Gradiente
Dwin	0053
0720	0056
0774	Grunpy
	0180
	0179



## MANUFACTURER CODES

Hallmark	Luxman
0178	0056
Harley Davidson	MEI
0179	0185
Harman/Kardon	MGA
0054	0150
Harvard	0030
0180	0178
Havermy	MTC
0093	0060
Hitachi	0030
0145	0056
0056	0185
0016	Magnavox
0032	0054
0038	0030
0151	0179
1145	0020
Infinity	0024
0054	0096
Inteq	0186
0017	0187
JBL	0386
0054	1254
JCB	1454
0000	Majestic
JVC	0016
0463	Marantz
0053	0054
Janeil	0030
0046	Matsushita
KEC	0250
0180	Megatron
KTV	0178
0180	0145
0030	0003
0039	Memorex
0185	0154
0217	0250
0280	0463
Kaypani	0150
0052	0178
Kenwood	0179
0030	0016
Kloss	Mercury
0024	0001
0046	Midland
Konka	0047
0707	0017
LG	0051
0056	0039
LXI	0032
0047	0135
0054	0747
0154	Minutz
0156	0021
0178	Mitsubishi
0747	0093
Logik	0150
0016	0178

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Troubleshooting

Manufacturer Codes

**KAMELEON-C6 REMOTE****SETUP CODES FOR  
TELEVISION** continued

	Philco
	0054
Motorola	0463
0093	0030
0055	0145
Multitech	0020
0180	0096
0217	Philips
NAD	0054
0156	0690
0178	1454
0166	Pilot
NEC	0030
0030	0039
0056	Pioneer
0497	0038
NTC	0166
0092	0679
Nikko	Portland
0030	0039
0178	0092
0092	Princeton
Noshi	0717
0018	Prism
Onwa	0051
0180	Proscan
Optimus	0047
0154	0747
0250	Proton
0166	0178
Optonica	0003
0093	0052
0165	0466
Orion	Pulsar
0236	0017
0463	Quasar
0179	0250
Panasonic	0051
0250	0165
0051	0055
0055	RCA
Penney	0047
0047	0018
0156	0038
0051	0090
0060	0135
0030	0679
0178	0747
0021	1047
0018	1147
0039	1247
0003	1347
0027	1447
0032	1547
0135	RadioShack
0747	0047
1347	0154
	0165
	0180
	0030
	0178
	0056
	0039
	0032
	0747

**MANUFACTURER CODES**

Realistic	Semivox
0154	0180
0165	Semp
0180	0156
0030	Sharp
0178	0093
0056	0165
0039	0039
0032	0157
Rhapsody	0386
0185	0688
Runco	0689
0017	Signature
0030	0016
0497	Simpson
0603	0186
SSS	0187
0180	Sony
Sampo	0000
0030	0080
0039	0111
0032	1100
0052	Soundesign
Samsung	0180
0060	0178
0030	0179
0178	0186
0056	Spectricon
0032	0003
0702	Squareview
0766	0171
Samsux	Starlite
0039	0180
Sansei	Supre-Macy
0451	0046
Sansui	Supreme
0463	0000
Sanyo	Sylvania
0154	0054
0146	0030
0159	0020
Scotch	0096
0178	0171
Scott	0381
0236	Symphonic
0180	0180
0178	0171
0179	TMK
Sears	0178
0047	0056
0054	0177
0154	TNCi
0156	0017
0178	TVS
0179	0463
0056	Tandy
0146	0093
0159	Tatung
0171	0055
0747	0003

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Troubleshooting

**Manufacturer Codes**

**KAMELEON-C6 REMOTE****SETUP CODES FOR  
TELEVISION** continued

Technics  
0250  
0051  
Technol Ace  
0179  
Techwood  
0051  
0056  
0003  
Teknika  
0054  
0180  
0150  
0060  
0179  
0056  
0016  
0039  
0092  
0186  
Telefunken  
0056  
0702  
Toshiba  
0154  
0156  
0060  
1256  
1356  
Tosonic  
0185  
Totevision  
0039  
Trical  
0157  
Universal  
0027  
Vector Research  
0030  
Victor  
0053  
Vidikron  
0054  
Vidtech  
0178  
Viking  
0046  
Wards  
0054  
0165  
0030  
0178  
0021  
0179  
0056  
0016  
0020  
0027  
0080  
0096  
0111

Waycon  
0156  
White Westinghouse  
0463  
0623  
Yamaha  
0030  
0769  
Zenith  
0017  
0463  
0178  
0016  
0092  
Zonda  
0003

**SETUP CODES FOR  
VCR**

Admiral  
0048  
0209  
Adventura  
0000  
Aiko  
0278  
Aiwa  
0037  
0000  
America Action  
0278  
American High  
0035  
Asha  
0240  
Audiovox  
0037  
0278  
Beaumark  
0240  
Bell & Howell  
0104  
Broksonic  
0184  
0121  
0209  
0002  
0479  
1479  
CCE  
0278  
Calix  
0037  
Canon  
0035  
Carver  
0081  
Cineral  
0278

# MANUFACTURER CODES

Citizen	GoldStar	Introduction
0037	0037	
0278	1237	
1278	Gradiente	
Craig	0000	Batteries/Keypad Overview
0037	HI-Q	
0047	0047	
0240	Harley Davidson	
Curtis Mathes	0000	Programming Remote
0060	Harman/Kardon	
0035	0081	
0162	Hitachi	
0760	0000	Advanced Options
1035	0042	
Cybernex	Hughes Network	
0240	Systems	
Daewoo	0042	Glossary/Troubleshooting
0045	JVC	
0278	0067	
1278	KEC	
Denon	0037	Manufacturer Codes
0042	0278	
Dynatech	Kenwood	
0000	0067	
Electrohome	Kodak	
0037	0035	
Electrophonic	0037	
0037	LXI	
Emerex	0037	
0032	Lloyd's	
Emerson	0000	
0037	MEI	
0184	0035	
0000	MGA	
0121	0240	
0043	0043	
0209	MGN Technology	
0002	0240	
0278	MTC	
0479	0240	
1278	0000	
1479	Magnasonic	
Fisher	1278	
0047	Magnavox	
0104	0035	
Fuji	0039	
0035	0081	
0033	0000	
Funai	0563	
0000	1781	
GE	Magnin	
0060	0240	
0035	Marantz	
0240	0035	
0760	0081	
0807	Marta	
1035	0037	
1060	Matsushita	
Garrard	0035	
0000	0162	
Go Video		
0432		

## KAMELEON-C6 REMOTE

### SETUP CODES FOR VCR continued

Memorex	Penney
0035	0035
0162	0037
0037	0240
0048	0042
0039	1035
0047	1237
0240	Pentax
0000	0042
0104	Philco
0209	0035
0479	0209
1162	0479
1237	Philips
1262	0035
Minolta	0081
0042	0618
Mitsubishi	1081
0067	1181
0043	Pilot
0807	0037
Motorola	Pioneer
0035	0067
0048	Polk Audio
Multitech	0081
0000	Profitronic
NEC	0240
0104	Proscan
0067	0060
Nikko	0760
0037	1060
Noblex	Pulsar
0240	0039
Olympus	Quasar
0035	0035
Optimus	0162
1062	1035
0162	1162
0037	RCA
0048	0060
0104	0240
0432	0042
1162	0760
1262	0807
Orion	1035
0184	1060
0209	RadioShack
0002	0000
0479	Radix
1479	0037
Panasonic	Randex
1062	0037
0035	Realistic
0162	0035
0225	0037
0616	0048
1035	0047
1162	0000
1262	0104
	ReplayTV
	0614
	0616

### 38 Manufacturer Codes

## MANUFACTURER CODES

Runco	Teac	Introduction
0039	0000	
STS	Technics	
0042	0035	
Samsung	0162	Batteries/Keypad Overview
0240	Teknika	
0045	0035	
Sanky	0037	
0048	0000	Programming Remote
0039	Thomas	
Sansui	0000	
0000	Tivo	
0067	0618	Advanced Options
0209	0636	
0479	Toshiba	
1479	0045	
Sanyo	0043	Glossary/Troubleshooting
0047	0845	
0240	Totevision	
0104	0037	
Scott	0240	Manufacturer Codes
0184	Unitech	
0045	0240	
0121	Vector	
0043	0045	
Sears	Video Concepts	
0035	0045	
0037	Videomagic	
0047	0037	
0000	Videosonic	
0042	0240	
0104	Villain	
1237	0000	
Semp	Wards	
0045	0060	
Sharp	0035	
0048	0048	
0807	0047	
Shogun	0081	
0240	0240	
Sonic Blue	0000	
0614	0042	
0616	0760	
Sony	White Westinghouse	
0035	0209	
0032	1278	
0000	XR-1000	
0033	0035	
0636	0000	
1032	Zenith	
1232	0039	
Sylvania	0000	
0035	0209	
0081	0033	
0000	0479	
0043	1479	
1781		
Symphonic		
0000		
TMK		
0240		

## KAMELEON-C6 REMOTE

### SETUP CODES FOR DIGITAL VIDEO DISC

Aiwa	JBL
0641	0702
Apex Digital	JVC
0672	0558
0717	0623
0755	0867
0794	KLH
0795	0717
0796	Kenwood
0797	0490
0830	0534
Audiologic	0682
0736	Konka
B & K	0711
0655	0719
Blaupunkt	0721
0717	Koss
Blue Parade	0651
0571	Lasonic
Broksonic	0798
0695	Magnavox
DVD2000	0503
0521	0675
Daewoo	Malata
0784	0782
Denon	Marantz
0490	0539
0634	Microsoft
Emerson	0522
0591	Mintek
Enterprise	0717
0591	Mitsubishi
Fisher	0521
0670	Nesa
GE	0717
0522	Onkyo
0717	0503
0815	0627
GPX	Oritron
0699	0651
0769	Panasonic
Go Video	0490
0715	0632
Gradiente	1362
0651	1490
Greenhill	Philips
0717	0503
Harman/Kardon	0539
0582	0646
0702	0854
Hitachi	Pioneer
0573	0525
0664	0571
Hiteker	0632
0672	Polk Audio
Integra	0539
0627	Proscan
	0522
	Qwestar
	0651

### 40 Manufacturer Codes



**MANUFACTURER CODES**

RCA  
0522  
0571  
0717  
0822  
1022  
Rotel  
0623  
Rowa  
0823  
Sampo  
0698  
Samsung  
0573  
0820  
Sansui  
0695  
Sanyo  
0670  
0695  
Sharp  
0630  
Shinasonic  
0533  
Sony  
0533  
0864  
Sylvania  
0675  
0821  
Technics  
0490  
Theta Digital  
0571  
Toshiba  
0503  
0695  
1045  
Tredex  
0799  
Urban Concepts  
0503  
XBox  
0522  
Yamaha  
0490  
0539  
0545  
Zenith  
0503  
0591

Introduction

Batteries/Keypad Overview

Programming Remote

Advanced Options

Glossary/Troubleshooting

**Manufacturer Codes**

## KAMELEON-C6 REMOTE

